16034E Test Fixture



Terminal Connector: 4-Terminal Pair, BNC

DUT Connection: 2-Terminal **Dimensions (approx.):** 128 (W) x 60 (H) x 71 (D) [mm] **Weight (approx.):** 270 g **Additional Error:**

Type of Error	Impedance
Proportional Error	±1.5 x (f/10) ²

f: [MHz]

Description: This test fixture is designed for impedance evaluations of SMD. The minimum SMD size that this fixture is adapted to evaluate is $1.6(L) \times 0.8(W)$ [mm].

Applicable Instruments: 4263B, 4268A, 4279A*, 4284A*, 4285A, 4288A, E4980A, E4981A, (4294A)***


- * denotes the instrument is obsolete.
- ** applicable in a limited frequency range.

Frequency: DC to 40 MHz

Maximum Voltage: ±40 V peak max (AC+DC)

Operating Temperature: 0°C to 55°C


DUT Size: See figure below

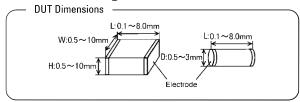

Furnished Accessories:

Description	P/N	Qty.
Operating Manual	16034-90041	1

Compensation and Measurement: Open and short compensations are recommended before measurement. Open compensation is performed by separating the high and low electrodes from each other. The separation should be equivalent in size to the DUT's width. Short compensation is performed by contacting the high and low electrodes together. After performing open and short compensations, the DUT is inserted into the test fixture. The following figures show how compensation and measurement are performed.

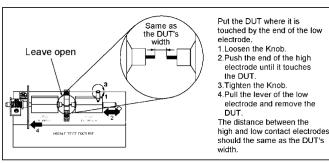

Short

1. Loosen the Knob.
2. Push the end of the high electrode until it touches the low electrode.
3. Tighten the Knob.


16034E TEST FIXTURE

Open compensation

1.Release lever and insert DUT.

Inserting a DUT

Short compensation

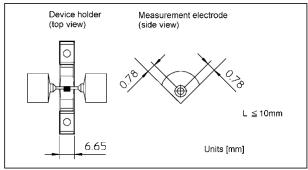

Electrode dimensions