

Optical Spectrum Analyzer AQ6317B

High-accuracy and high-resolution optical spectrum analyzer for evaluating D-WDM systems and components.




High-accuracy and high-resolution optical spectrum analyzer for evaluating DWDM systems and components.

The AQ6317B is an advanced optical spectrum analyzer for a wide range of applications, including light source evaluation, measurement of loss wavelength characteristics in optical devices, and waveform analysis of WDM systems.

Especially at C and L band, the unit achieves high wavelength accuracy and wavelength linearity, and can evaluate optical devices for WDM. Analysis functions make operation and expandability simple.

In comparison with the former model, the wavelength accuracy of the AQ6317B has been improved to ±20 pm, and this is also specified for the L-band. The WDM analysis function and notch width analysis function have been improved, and a multi-channel NF analysis function and optical filter analysis function are new additions. It has become much easier to use owing to other improvements such as sweep speed-up.

The AQ6317B contains the latest Ando technology for optical spectrum analyzers — reference equipment for the next generation.

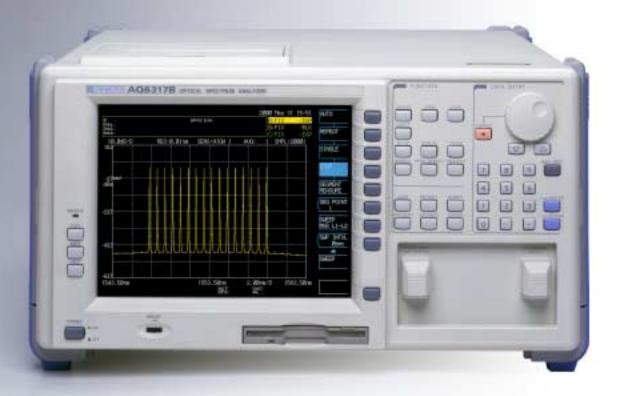

Features

High wavelength accuracy

Provides ± 0.02 nm wavelength accuracy at 1520 to 1580 nm, and ± 0.04 nm at 1580 to 1620 nm, with ± 0.01 nm wavelength linearity, making it especially useful for high-precision loss wavelength characteristics and other evaluation of WDM devices.

The horizontal axis corresponds to air wavelength, vacuum wavelength and frequency.

• High wavelength resolution

Achieves a wavelength resolution of 0.015 nm. Fig. 1: Measurement example of DFB laser spectrum.

• Wide dynamic range for 50 GHz WDM signals

The dynamic range is 70 dB at peak ± 0.4 nm, and 60 dB at peak ± 0.2 nm.

High-resolution measurement achieves wide dynamic range with 50 GHz spacing WDM system.

Fig. 2: Measurement example showing dynamic range.

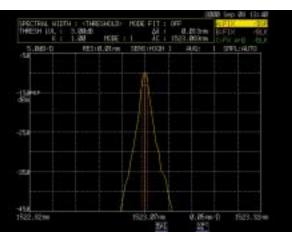


Fig. 1: Example of output wavelength

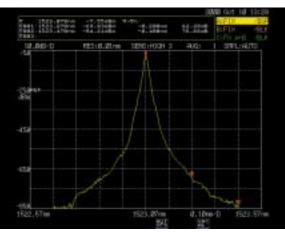


Fig.2: Measurement example of transmission characteristic of 16channel AWG

Low polarization dependency

Measurements such as optical amplifier gain can proceed with accuracy because polarization dependency is suppressed as low as ± 0.05 dB.

• High-level accuracy

Accurate within ±0.3 dB.

- 9.4-inch color LCD
- Pulsed light can be measured
- Three individual trace memories

Versatile analysis functions

Analysis functions for WDM and other optical devices (LD, LED, FBG, etc.).

Synchronous sweep

In conjunction with an AQ4321A/D Tunable Laser Source, much higher wavelength resolution/wide dynamic range can be achieved by high-speed synchronous sweep (Max. speed: 10 nm/1 sec).

• Wide band, high sensitivity and high power measurement

-90 to +20 dBm (1200 to 1600 nm)

-80 to +20 dBm (1600 to 1700 nm)


High sensitivity allows measurement of light at down to -90 dBm, covering from 1200 to 1600 nm.

Optical amplifiers and high-powered laser diodes can be measured directly because measurement of up to +20 dBm per one resolution is possible.

Applications

• WDM signal analysis

Simultaneously measure peak wavelength, peak level and SNR of DWDM signals of up to 200 channels. Measurement results can be displayed as wavelength difference/level difference to the reference channel, or wavelength difference/level difference to the ITU-T grid and its fluctuation width, as well as absolute value. The wavelength of the reference channel can be set through the one-touch GUI screen.

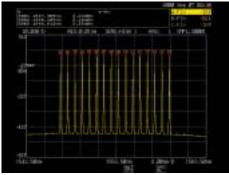


					3000 1	19 ET 28-26
100	MeLVID IN		107	num.	C HOLE PS	 8.42%
		14.2	LADE TO		TKDE I P	*) 1.004
	autoret+ let	LEUE. Créssi	IPoc1 No 1 ve/	UL DOP OFT	611070-600 [404]	0401
272220-169899999999		いたままでは、そのでは、「「「」」、「」、「」、「」、「」、「」、「」、「」、「」、「」、「」、「」、	※当然の名言のなるのなるのなるのなる。	· · · · · · · · · · · · · · · · · · ·	来的自己的名词复数自己的名词复数的自己的 如何的是他们的是他们的是他们的是	


WDM measured waveform

WDM measurement result

• Optical fiber amplifier (EDFA) evaluation

The ASE interpolation method is used to measure gain and NF up to 200 channels, key parameters for optical fiber amplifier evaluation. In conjunction with the AQ8423Z optical amplifier analyzer, the system can accurately measure gain and NF using the pulse method, which is optimal for evaluating WDM optical fiber amplifiers.

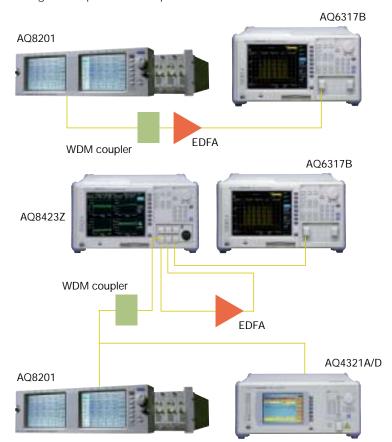


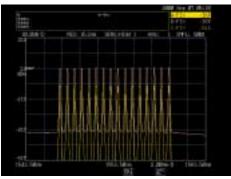

WDM waveform before/after amplification by EDFA

							1.00
- 101			4/m (#111			T-GLT11	2.00.0
	Distant	THE HIT	22 1483		_	E I PTI	1.00.0
ю.	ALC: NO.	sent un	0.747	aur uu	ALC: N	64 N	
	Cent	140+1	LEU 19841	Cretes!	[res]	1401	6.12 6.28 6.28
182	1547, 311 1546, 115 1546, 115	-9.00	유지(유지) 고려	133	鼺	11.34	0.32 0.28 0.32
102	3549,115	-9.29	2.18	-38.00	6.119	11.92	0.28
	2548, 10.9 1540, 726	-9.12	2, 18	-38.50	111	11.54	6.22
8	2010 101	7.8	운민		5 H K	11.65	242
<u>.</u>		(株式市内支援市内市市市市市市市市市市市市市市市市市市市市市市市市市市市市市市市市市	12월 21일 월 12일 년 42일 년	-39.50		「「「「「」」」ので、「」」」」」」」」」」」」」」」」」」」」」」」」」」」」	のないないのでの
	201.20 200.12 200.20	-3-32	2, 10	100.00		1111	1.15
- 22	STREET FOR	1.12	212	10.21	1 R	100	2.2
188	-202152	1.2	1400년 400년 400년 1910년 1910년 1911년	· 10.00 · 10.		11.25	2.5
10	2014.141	-9-14	31, 64	-38.64	100	11.00	1.10
	10000-1044	-0.44	0.81	12.05	10.00	11.04	
	1000.1102	-9.40	五輪	-38.67	2112	11.56	C 14
122	25500, 1162 25500, 1063	-9.10	0010	-CER . 4097		11.00	いいの
	20011220	-8.35	.2.45	-38 TL	A 111	12.40	5. KL
	2550.584	-9.40	白癬	透袋		10.00	5.54
		-9.16	2,71	-38.54	8.115	11.98	1211122 2211222


Measurement results of gain and NF

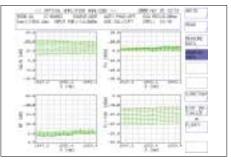


Measurement example of EDFA gain and wavelength dependency of NF (Measurement results displayed on the AQ8423Z's screen)

Characteristic evaluation of optical passive devices


In conjunction with ASE light source, wide band light source, etc., users can simply proceed with fiber grating (FGB) and evaluation of passive devices such as the WDM filter. Peak/bottom wavelength, level, crosstalk, and ripple width can be simultaneously measured using the optical filter analysis function.

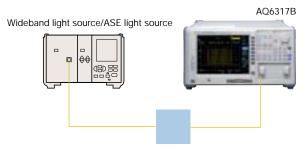


DUT (ex. FBG, WDM filter)

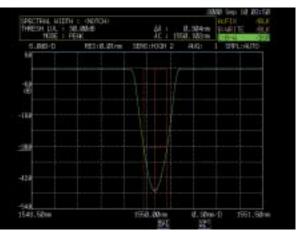

Measurement example of fiber grating notch width

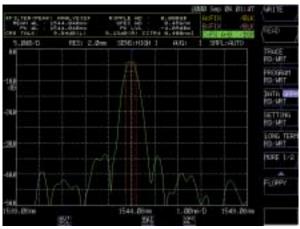


Measurement example of transmission characteristics of WDM filter

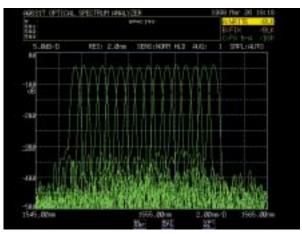

Measurement example of transmission characteristics of 16-channel AWG

Characteristic evaluation of optical multiplexer (OMUX) using synchronous sweep


In conjunction with the AQ4321A/D Tunable Laser Source, the AQ6317B achieves high wavelength resolution/wide dynamic range with high-speed synchronous sweep function, and result insertion loss, passed central wavelength and linearity as evaluation parameters of optical MUX/DEMUX.

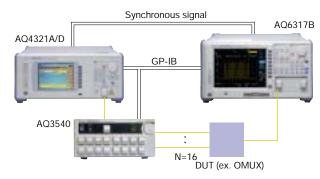

Applications

• Various parameter evaluations of LED, FP-LD and DFB-LD

SMSR of LED, FP-LD and DFB-LD. Parameter evaluations such as side mode suppression ratio, etc. can proceed with one-touch operation.

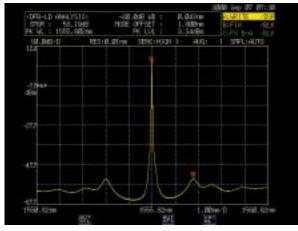

DFB-LD measurement example

• Programming function

Memorizes measurement conditions, the measurement process, etc. at the outset. Enables a measurement system without use of the external controller by employing the AQ6317B as controller for external equipment. Program anything from measurement conditions of wavelength sweep width, set resolution, etc. to various analysis functions, printer output and floppy disk storage. Memorizes up to 20 programs, and eliminates complicated manufacturing operations.




Example showing measurement parameterchange

	0000 Sec 27 81:58	RELEASE
PROPERT EDUT		LUE.
SVIC DERO (FRENT OUT) SVIC CENTER 41, 1958, 80mm		COTTINO CIRLICT
BBD SPAN ML 42.0mm 001 REFERENCE LEVEL -10.000m 004 LEVEL SCHLE 10.000 0		FoliarETE
REFERENCETION VL 2.0mm REFERENCE REFERENCE FORM 1 REFERENCE FORM AUTO		BITER
and culling Healpe and culling Healpe and Display A		IPECIAL COTTAND
n11 witte b n12 biPt,0v 6 n13 b-4 = t		LIST
814 DISPLAY C BTS ACTIVE TRADE E		MORE 1-2
816 1 = 1 817 N = 16 818 8500 7 °C 818 8500 7 °C		RETURN
819158740 T 102 808176061760 Yushi 801177 + NALANDO		ENIT
RE2 SPOLL 715 RE3 PROIT THEVERENENT DAVINEL NUMER		ROOPH
NEN PRINT Z NES STOLE		


Programming example

Long-term function

Sweeps all set times and stores (max. 1,000 points) the results of WDM analysis (peak wavelength, peak level and SNR of each channel). An effective function for ascertaining long-term changes of each channel or for cycle testing of devices.

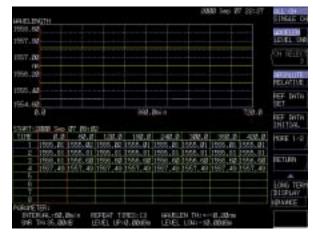

Example of long-term function (all channel display)

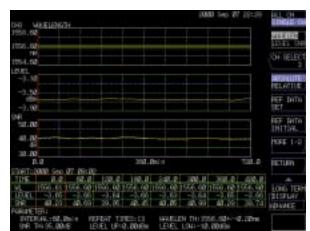

Example of long-term function (single channel display)

Optical Spectrum Analyzer AQ6317B

Specifications

Applicable fibers		SM, GI (50/125 μm)			
Measurement wavelength		600 to 1750 nm			
range ¹⁾					
Wavelength	accuracy ^{1,3)}	± 0.02 nm (1520 to 1580 nm , after calibration with			
		build-in reference light source)			
		± 0.04 nm (1580 to 1620 nm , after calibration with			
		build-in reference light source)			
		±0.5 nm (600 to 1750 nm)			
Wavelength	linearity ^{1, 3)}	±0.01 nm (1520 to 1580 nm)			
		±0.02 nm (1580 to 1620 nm)			
Wavelength	repeatability ^{1,3)}	±0.005 nm (1 min)			
Wavelength	resolution ^{1,3)}	Max. resolution: 0.015 nm or better (1520 to 1620 nm,			
		RESOLN: 0.01 nm)			
		Resolution setting: 0.01, 0.02, 0.05, 0.1, 0.2, 0.5, 1.0, 2.0 nm			
Resolution a	ccuracy ^{1,3)}	±5 % (1300 to 1650 nm, RESOLN: 0.05 nm or more,			
		resolution correction: ON)			
Measuremen	nt level range ^{2,3)}	-90 to +20 dBm (1200 to 1650 nm, SENS: HIGH 3)			
		-80 to +20 dBm (1000 to 1200 nm, SENS: HIGH 3)			
		-60 to +20 dBm (600 to 1000 nm, SENS: HIGH 3)			
Level accura	ICY ^{2, 3, 4)}	±0.3 dB (1310/1550 nm, input level: -30 dBm,			
		SENS: HIGH 1 to 3)			
Level linearit	y ^{2,3)}	±0.05 dB (input: -50 to +10 dBm, SENS: HIGH 1 to 3)			
Level flatnes	S ^{2,3}	±0.1 dB (1520 to 1580 nm), ±0.2 dB (1580 to 1620 nm)			
Polarization	dependency ^{2,3)}	±0.05 dB (1550/1600 nm), ±0.05 dB typ. (1310 nm)			
Dynamic ran	ige 3)	60 dB (1523 nm, peak ±0.2 nm, resolution: 0.01 nm)			
		70 dB (1523 nm, peak ±0.4 nm, resolution: 0.01 nm)			
		45 dB (1523 nm, peak ±0.2 nm, resolution: 0.1 nm)			
Sweep time		Approx. 500 ms (SPAN: 100 nm or less, SENS: NORM			
		HOLD, AVR: 1, SMPL: 501, resolution correction: OFF)			
		Approx. 0.5 min (SPAN: 100 nm or less, SENS: HIGH 2,			
		AVR: 1,SMPL: 501, No signal)			
Function	Automatic	Program function (20 program, 200 steps),			
	measurement	Long-term measurement function			
	Setting of	Span setting: 0 to 1200 nm			
	measuring	Measuring sensitivity setting: NORMAL HOLD/AUTO,			
	conditions	MID, HIGH 1/2/3			
		Number of averaging setting: 1 to 1000 times			
		Sample number setting: 11 to 20001, AUTO			
		Automatic setting function of measuring conditions			
		Sweep-between-marker function			
		0 nm sweep function			
		Pulse light measurement function			
		Air/vacuum wavelength measurement function			
		TLS synchronized measurement function			
-		•			

Function	Trace display	Level scale setting: 0.1 to 10 dB/div, linear		
		Simultaneous display of 3 independent traces		
		Max./Min. hold display		
		Roll averaging display		
		Calculation-between-traces display		
		Normalized display		
		Curve-fit display		
		3D display		
		Split display		
		Power density display, % display, dB/km display		
		Frequency display of horizontal axis scale		
	Data analysis	WDM waveform analysis (Wavelength/Level/SNR list display)		
		Optical fiber amplifier analysis (GAIN/NF, Single/Multi channel)		
		PMD analysis, Optical filter analysis, DFB-LD analysis		
		FP-LD analysis, LED analysis, SMSR analysis		
		Peak search, bottom search, spectral width search, notch width search		
		Delta marker (max. 200), line marker (analysis range specification)		
		Graph display of long-term measurement result		
	Others	Self-wavelength calibration function (using built-in		
		reference light source)		
Memory	Build-in FDD	3.5-inch 2HD		
	Internal memory	32 traces, 20 programs		
	File format	Trace file, program file, measuring condition file		
		Text file (trace, analysis data, etc.)		
		Graphics file (BMP, TIFF)		
Data output	Printer	Built-in high speed thermal printer		
Interface	Remote control	GP-IB (2 ports)		
		TLS control interfaces (TTL)		
	Others	Sweep trigger input (TTL)		
		Sample enable input (TTL)		
		Sample trigger input (TTL)		
		Analog output (0 to 5 V)		
		Video output (VGA)		
Display		9.4-inch color LCD (Resolution: 640 x 480 dots)		
Optical connector		FC (Standard)		
Power requirement		AC 100 to 120/200 to 240 V, 50/60 Hz, approx. 200 VA		
Environmental conditions		Operating temperature: 5 to 40 °C		
		Storage temperature: -10 to +50 °C		
		Humidity: 80 %RH or less (No condensation)		
Dimensions and mass ⁵⁾		Approx. 425 (W) x 222 (H) x 450 (D) mm, approx. 30 kg		
Accessories		Power cord: 1, printer paper roll: 2, floppy disc: 2,		
		instruction manual: 1		

Notes:

1) Horizontal scale: wavelength display mode
2) Vertical scale: absolute power display mode, RESOLN: 0.05 nm or more, resolution correction: OFF
3) At 15 to 30 °C, with 10/125 µm single mode fiber, after 2 hours of warm-up, after optical alignment
4) When 10/125 µm single mode fiber (B1.1 type defined on IEC60793-2, PC polished, mode field diameter: 9.5 µm, NA: 0.104 to 0.107) is used.
5) Excet protector

Ando Electric Co., Ltd.

3-484, Tsukagoshi, Saiwai-ku, Kawasaki, Kanagawa, 212-8519 Japan Phone: +81 (0)44 549 7300 Fax: +81 (0)44 549 7450

Ando Corporation

2021 N. Capitol Avenue, San Jose, CA 95132, U.S.A. Phone: +1 408 941 0100 Fax: +1 408 941 0103

EAST OFFICE: 7617 Standish Place, Rockville, MD 20855, U.S.A. Phone: +1 301 294 3365 Fax: +1 301 294 3359

Ando Europe B.V.

"Vijverdam", Dalsteindreef 57, 1112XC Diemen, The Netherlands Phone: +31(0)20 698 1441 Fax: +31(0)20 699 8938 NIEDERLASSUNG DEUTSCHLAND: Nymphenburger Straße 119 B, D-80636 München, Germany Phone: +49(0)89 143 8150 Fax: +49(0)89 143 81555 Ando Electric Singapore Pte. Ltd.

19 Kim Keat Road #05-03, Fu Tsu Building, Singapore 328804 Phone: +65 251 1391 Fax: +65 251 1987